

# Where to Find the Cold Water Isolation Valve

The isolation valve in the cold water supply line allows the water heater to be isolated in the event that servicing is required.

If there is no water running from the hot tap, check that this valve is open.

Many installations have the isolation valve and non-return valve combined. In this illustration, they are separate.

