



Installer's Guide

IMPORTANT INFORMATION

Read This Document First

On completion, sign and leave with owner

sunpro[®] 305

(Gas Pre-Boost) Solar Water Heater

Model: 170FNS

Installation by a licensed tradesperson and in accordance with:

- AS/NZS 3500.4 "National Plumbing & Drainage Code Hot Water Supply Systems – Acceptable Solutions"
- AS5601/AG601 Gas Installation
- Adherence to local authority and OH&S regulations
- Victorian PIC Requirements



For advice, repairs and service, call:

1300 365 115 (Australia)

0800 729 389 (New Zealand)



Carefully remove all packaging and transit protection from the heater before installation. Dispose of the packaging responsibly using re-cycling facilities where they exist.

Specifications and materials may change without notice.

Effective for Sunpro 305 gas boosted solar water heaters manufactured and sold after 1st June 2006.




Installer's Guide


Rough In Diagram	1	Flashing	16
Read This Document First	2	Temperature Sensor	17
Safety Audit	2	Heat Trap/Non Return Valve	19
Removal of Existing Tank	3	PTR Valve	20
Placement of New Tank	3	Gas Connection	20
Water Connections	4	GPO	21
Pipes – Important Points	5	Tempering Valve	22
Collectors – Alignment and Inclination	7	Commissioning the System	22
Collectors – Important Points	8	Lighting the Water Heater	23
Collectors – Attaching to Roof	9	Commissioning Checklist	24
Collectors – Attaching Fittings	11	Installation Declaration	25
4 Way Union Assembly	14	Components	26
Anti-Frost Valve	15		



Rough In Diagram

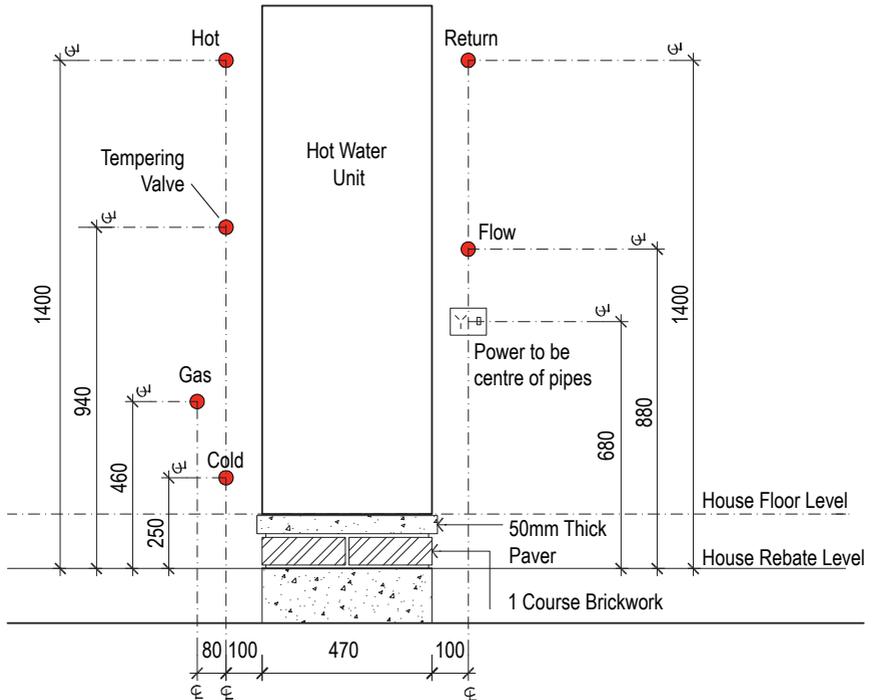

Hot Water Overflow Position

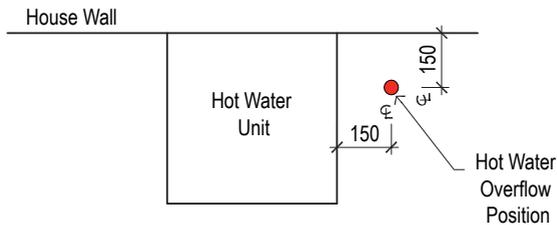

● Approximate location of pipework. A tolerance of 25mm is acceptable to dimensions shown in table below.

Note: Ensure pipes protrude horizontally from wall, and leave enough length of pipe to allow easy connections.



Installer's Guide


Read This Document First

Step 1

- This *Installer's Guide* and the *Owner's Manual* (also included in the product carton) contain important information about installation and use of this water heater.



Note: For an easier installation, please read this document before you begin.

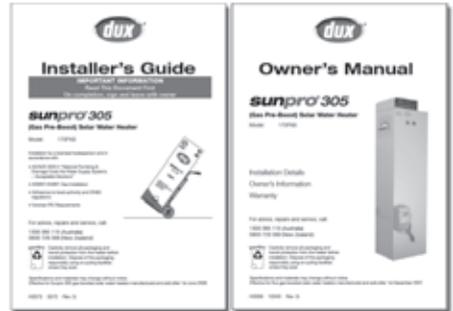

Safety Audit

Step 2

- Arrive at site, park vehicle as close as allowable to installation, and conduct a safety audit, also known as Work Method Statements (WMS) or Job Site Analysis (JSA).
- Prior to working at heights, it is the responsibility of the installer to ensure that all practices are compliant with any relevant OH&S legislation.



Note: Do not commence a job where the risks cannot be controlled.

- Refer to local working at heights regulations. **NSW Ref: "Safe Work on Roofs – Part 2 Residential" Code of Practice 2004, Work Cover NSW.**



Installer's Guide

Removal of Existing Tank

Step 3

- The existing tank (if applicable) should be drained and removed in a responsible manner.



Note: Do not drain on to grass or garden beds.

Placement of New Tank

Step 4

- Safely position new storage tank on a level surface in accordance with all plumbing and building regulations.



Note: We recommend a plinth be installed under the water heater where the water heater is subjected to wet conditions.

- Refer to the section called “**Rough In Diagram**” on page 1 for detailed information on position of plumbing.



Install a plinth under the water heater where the water heater is subjected to wet conditions




Installer's Guide

Water Connections

Step 5

- Using correct plumbing methods, connect the cold water pipe to the storage tank.
- According to local regulations and the plumbing code, fit any and all valves that are necessary e.g. tempering valves, pressure limiting valves, line strainer, duo valves, cold water expansion valves etc.
- We recommend the use of new valves for all Installation. Refer to plumbing code and/or local requirements.

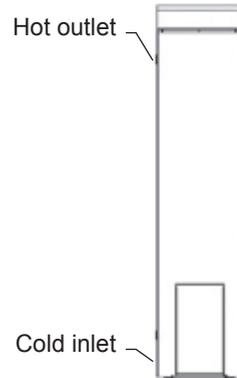



Installer's Guide

Pipes – Important Points

Step 6



Critical: Due to the high temperature imposed by solar heated water, all solar system pipes and fittings must be DR brass and copper, including collector compression fittings (as supplied). No plastic pipes or fittings.

- Flow and return lines must be installed as direct as possible between tank and collector.
- Pipes **must be fully insulated** with UV stabilized insulation suitable for solar working temperatures. We recommend Armaflex DuoSolar / Solar insulation, minimum 13mm thick (refer to local regulations).



Note: Warranty will be void if this minimum insulation requirement is not used.



Pipes must be DR brass and copper. Refer to AS3500.



Pipes must be fully insulated with UV stabilized insulation suitable for solar working temperatures, minimum 13mm thick (refer to local regulations)





Installer's Guide



- It is **critical** to stop any chance of an air lock developing, so ensure that:
 - no pipework is higher than the automatic air vent valve
 - flow and return pipes from the solar collectors to the water storage tank have a minimum of 5° continuous fall
 - pipes have no high points that allow air to be trapped
 - the minimum number of bends in the pipes are used.
- Flow and return lines should be neatly installed and hidden inside the roof cavity if possible.
- Take care when running flow and return lines through the roof, cladding and the eaves.



Note: Where roof and the eaves are made from asbestos, specialised handling and advice is necessary.

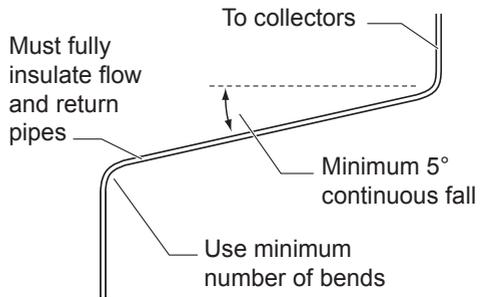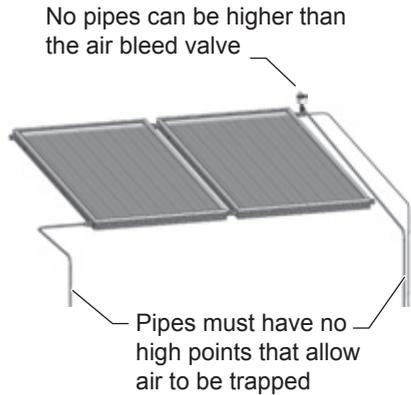

Ensure flow and return pipes from the solar collectors to the water storage tank have a minimum of 5° continuous fall

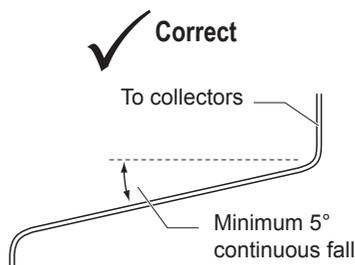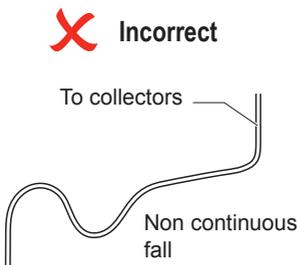




Installer's Guide

Collectors – Alignment and Inclination

Step 7

Solar Collector Alignment

- For the most efficient solar gain, the collectors must be aligned $\pm 45^\circ$ from true north (i.e. north west to north east). See **Collector Orientation Compass** below.

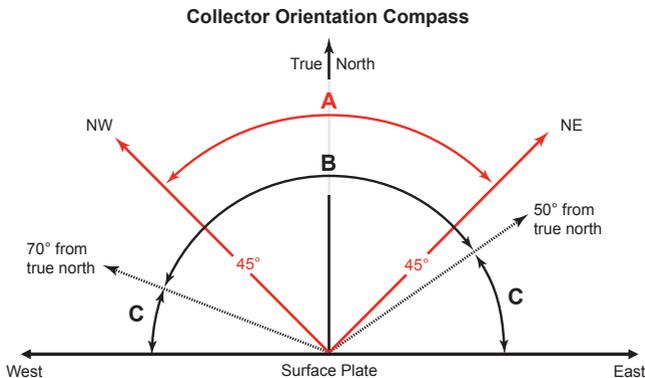


- A. Dux preferred range
- B. Industry accepted range
- C. If orientations A or B are not practical, an additional collector can be installed at the home owner's discretion in range C (not required north of Tropic of Capricorn)

Note: When establishing the correct Collector Orientation, please account for the Magnetic Declination of your geographic location

Solar Collector Inclination

- For the most efficient solar gain, the collectors must be inclined within 10° to 45° from horizontal. See **Collector Inclination Guide** right.

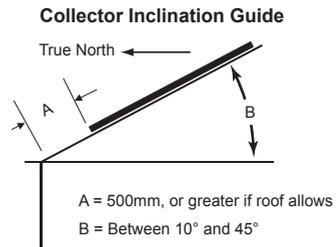



Installer's Guide

Collectors – Important Points

Step 8

- Inspect fittings after collectors are pressurized with water.



Critical: Fittings must be as tight as possible.




Warning: Only pressurize the the collectors for inspection and de-pressurize them immediately after inspection.



Critical: Do not leave collectors pressurised for longer than 24 hours.

- To prevent damage, collectors should be left pressurised **only** when connected to the storage tank with appropriate pressure relief valves.
- Collectors can be located a maximum of 20 metres (with minimal bends) from the storage tank if pipe layout is simple.

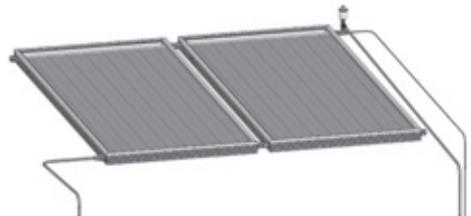

Note: For more energy efficiency, locate the collectors as close as possible to the tank

- This system is suitable for 2 storey homes.



Installer's Guide


Collectors – Attaching to Roof

Step 9

For Both Metal and Tiled Roofs

- Locate the lower mounting rail a minimum of 500mm distance from the gutter, or greater if roof allows.

 **Note: Ensure that the rail is parallel with the gutter.**

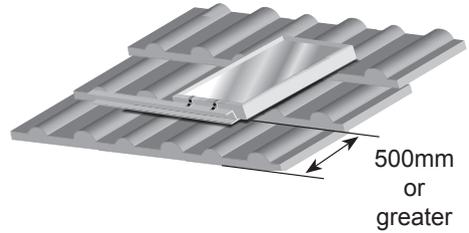

Step 10

For Metal Roofs Only

- Fix roofing screws through the mounting straps on both sides, using rubber grommets to prevent corrosion.

 **Note: A minimum of 3 roofing screws of 40mm length must be used to fix the collector strap to the truss.**



- Ensure that the rail is parallel with the gutter.



Installer's Guide

For Tiled Roofs Only

- Carefully remove a roof tile and locate the nearest roof truss.
- Attach the first (2 per mounting rail) stainless steel collector strap to the mounting rail.
- Shape the collector strap over the tile and position over the roof truss.



Note: A minimum of 3 roofing screws of 40mm length must be used to fix the collector strap to the truss.



- Ensure collector strap is located on truss vertically.
- Repeat this process for the collector strap at the other end of the mounting rail.

Step 11

- Once the bottom rail has been secured, the collector can now be lifted on to the roof.



Note: Ensure this is done with full consideration to OH&S regulations. Care should be taken.

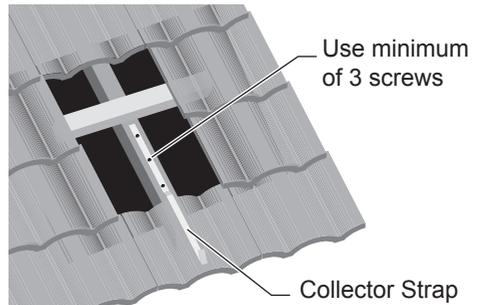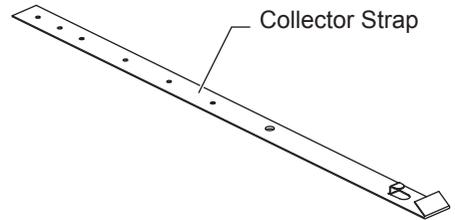



Installer's Guide

Collectors – Attaching Fittings

Step 12


All connections must be brass and all pipe work must be copper

- Ensure fitting is fully engaged on to the header pipe. This is very important for correct connection.
- To ensure leak proof installation, hold fitting A (see illustration in margin) while tightening nut B to prevent twisting the header pipe.


 **Critical: Do not use multi grips or similar tool, as you will damage the brass fittings. Ensure you use the correct size spanner.**

 **Critical: The fitting must be as tight as possible on the barrel union to prevent the fitting coming loose.**

Hold fitting A while tightening nut B to prevent twisting the header pipe

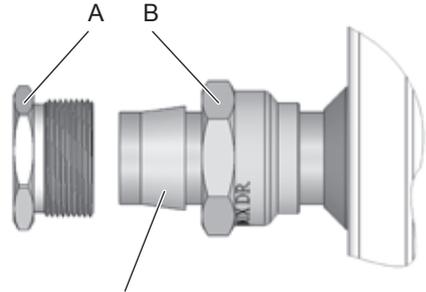

Ensure the brass conetite compression fitting is installed in the correct direction

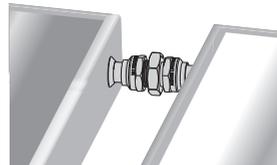



Installer's Guide

Step 13

- Secure the collectors to the mounting rail with the Z brackets, screws, nuts and bolts provided with the water heater.

Step 14


- Repeat the process for the second collector.



Note: Ensure this is done with full consideration to OH&S regulations. Care should be taken.

Step 15

- Now position the top mounting rail and repeat the above steps for that rail.
- Join the top connections with the brass compression fittings supplied.

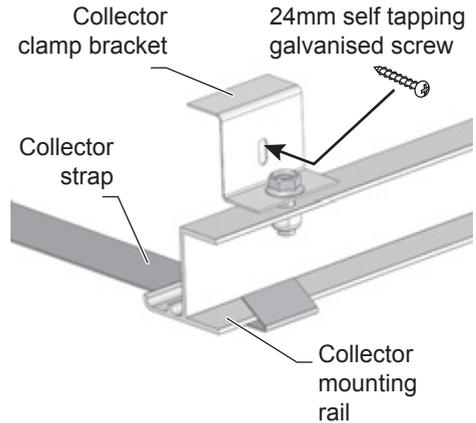




Installer's Guide

Step 16

- Connect collector flow and return pipes to the collectors.
- Ensure that you connect the solar flow (cold) and solar return (hot) pipes to the correct connections:
 - the solar flow (cold) pipe connects to the **bottom** of the collectors
 - the solar return (hot) pipe connects to the **top** of the collectors, diagonally opposite to the solar cold pipe connection.
- We suggest when you install pipes through roof, that you consider colour coding the pipe ends to show flow and return.



Critical: During connection, the header pipe can move in the collectors. It is critical that the header pipe is centred to provide about 40mm of tube on both sides of the collector.

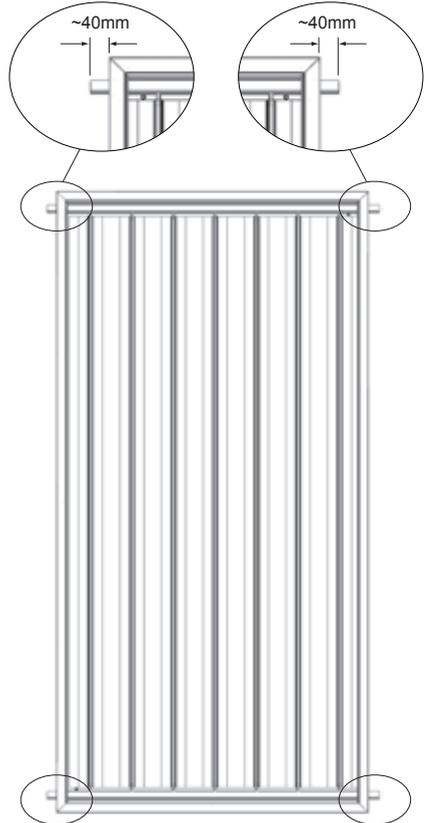



Installer's Guide



4 Way Union Assembly

Step 17

- Using correct plumbing methods, install the 4 Way Union assembly and air bleed valve at the **highest point in the system**, at the top of the collector diagonally opposite the solar collector inlet pipe.
- The air bleed valve **must stand vertically** straight towards the sky.

 **Note: If installed in top left/ bottom right of collector, then T should be reversed.**

- When fitting the 4 Way Union assembly, we recommend Loctite 577 Thread sealant and/or a good quality pink teflon tape to secure the air bleed valve. Tighten by hand. **Do not use spanner.**

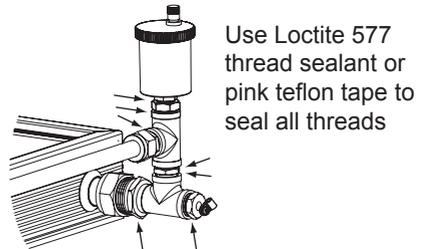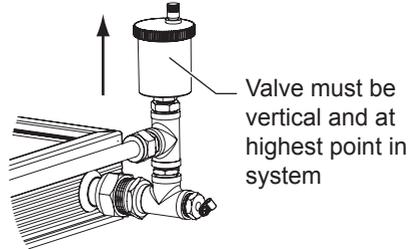




Installer's Guide

Anti-Frost Valve

Step 18

- In locations that experience ambient air temperatures of 5°C and below, and in accordance with the Frost Protection Installation Map below, you **must** install an anti-frost valve. The valve comes in kit form and must be ordered separately.
- Connect the anti-frost valve to the top collector connection, on the opposite collector to where the thermowell/air bleed valve is installed.
- Ensure the valve is pointing down the collector towards the gutter, parallel to the collector.

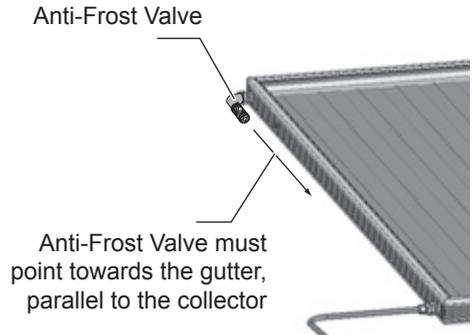

Frost Protection Installation Map



All locations highlighted in gray require an approved anti-frost protection device to maximise system performance. Call Dux Hot Water 1300 365 115 for further information.




Installer's Guide

Flashing

Step 19

- As per local authority regulations, use an approved method of flashing on the flow and return lines, e.g. Dektite or lead collars.
- Where flow and return lines penetrate the roof surface, the penetration must occur on the high side of the roof profile, not in the valley.
- Seal the roof penetration with a flexible waterproof flashing. We recommend the use of the appropriate Dektite brand solar flashing (available for either tile or steel roofs).

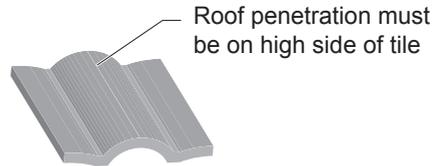





Installer's Guide

Temperature Sensor

Step 20

- Insert the end of the collector temperature sensor (supplied in collector rail kit) into the sensor dry well.
- The sensor must be **fully** inserted and touch the end of the thermowell.
- Firmly secure the sensor using the cable securing clip.

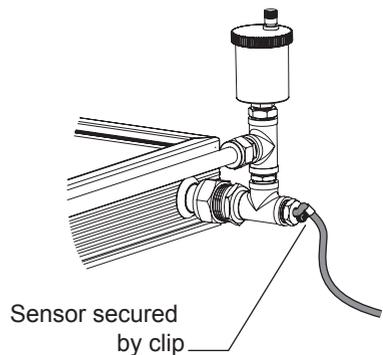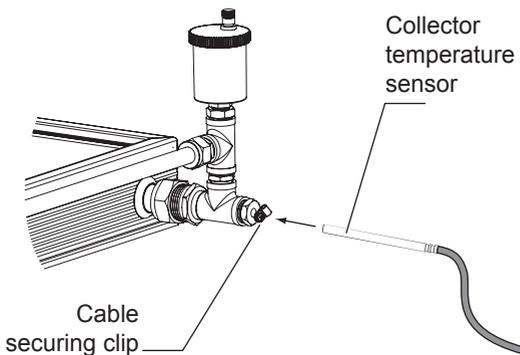

Warning: Install the sensor cable such that it does not touch the roofing material surface.



Warning: The collector sensor cable is a silicon rubber that may require additional conduit protection in extreme UV radiation conditions.




Warning: Conceal all temperature sensor cables in the roof cavity so that they are not exposed to sunlight or heat.



Installer's Guide

Step 21

- Connect collector sensor cable to terminal block and secure to the timber or metal truss inside the roof cavity.
- Connect extension collector sensor cable to junction block.
- Do **not** run collector sensor cable in contact with the copper pipes as it may melt and cause signal interference.
- Connect collector sensor cables as shown in diagram.
- There is no polarity for which collector sensor cable goes into which terminal block connection.
- Ensure terminal block is covered, ideally installed within the roof space and secured to a truss. **Do not leave exposed.**
- If the terminal block cannot be located within the roof space, it must be enclosed within a waterproof junction box.

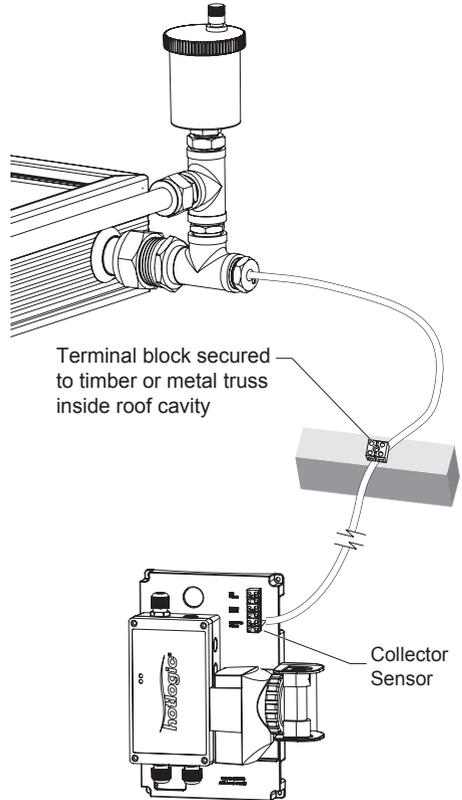

Warning: If sensor cable is on top of a steel roof, the heat produced from the roof may cause the sensor wire to melt and cause signal interference or failure.



Installer's Guide

Heat Trap/Non Return Valve

Step 22



- The hot water return pipe from the solar collector must run horizontally to the tank, to allow for a heat trap to be installed where the pipe enters the tank.
- The heat trap prevents heat loss due to thermo-siphoning.

 **Warning: This uninsulated pipe is very hot. Please Do Not Touch.**

- Flow and return lines should be neatly installed. Care needs to be taken when running flow and return lines through the eaves.

 **Note: Where eaves are made from asbestos, specialised handling and advice is necessary.**

- If a heat trap is not possible (e.g. due to lack of space), a non-return valve can be used instead of a heat trap. Dux recommends a high temperature Reliance brand non return valve.
- If using a non return valve, ensure that it is installed so that the flow direction arrow faces the storage tank.
- All pipe work must be insulated, but do **not** insulate the U bend section of the heat trap.

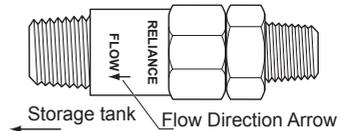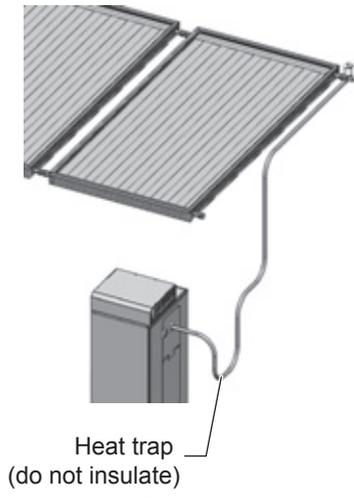




Installer's Guide

PTR Valve

Step 23


- Connect the PTR valve and plumb to waste to comply with AS/NZS 3500.4 and local plumbing codes.
- The pipe from the PTR valve **must**:
 - be easily seen
 - pose no risk of damage to the building or injury to persons.

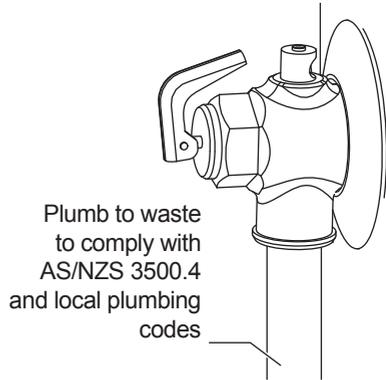

Gas Connection

Step 24

- Pipe sizes should be in accordance with AS5601/AG601.
- Fit a union to the water heater gas inlet for easy connection and removal.
- Fit an AGA approved isolating gas cock in the supply line adjacent to the water heater gas connection.
- Ensure that the supply pipe and the gas pressure regulator (LPG or Natural Gas) has sufficient flow capacity for this and other appliances connected to the fitting line.
- For LPG appliances, ensure that gas cylinders are of sufficient size.
- Before connecting to the gas service, purge any debris or air. Venting of purged gas shall be an area free of sources of ignition.

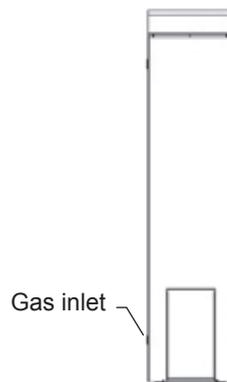



Installer's Guide

- Close the isolating gas cock prior to connection of the appliance.
- After connection, check all joints for leaks with an approved leak tester.

GPO

Step 25

- Install a Weatherproof GPO for the system.
- Separate continuous electrical power must be supplied to the Hotlogic controller. This ensures the protection features are enabled.
- This water heater is designed for connection to the following:
 1. Solar Pump Module – CONTINUOUS TARIFF
 2. Tank Boost – Off Peak, single phase 240V A.C. supply



Note: This water heater is also designed to allow the tank boost to be connected to continuous tariff to satisfy heavy daytime users of hot water that exceed the capacity of the off peak boost option.



Warning: Power cables should be routed away from any hot water pipes. If this is not practical, insulate the hot water pipes to avoid direct contact with the power cables.



Installer's Guide


Tempering Valve

Step 26

- Fit the solar tempering valve that is included with this water heater.




Note: Any adjustment to the valve should be made according to the valve manufacturer's recommendations.

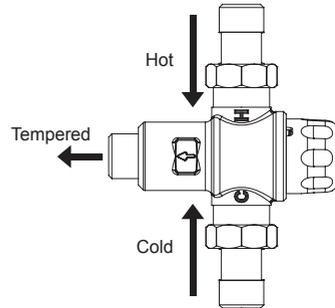

Commissioning the System

Step 27

- If the solar water heater has been installed correctly, when the power is turned on the Hotlogic controller will go through initialisation: red and green status lights will alternate for 10 seconds, then the Hotlogic controller's status lights will be either green (power on) or a combination of green (power on) and red (pump on). Any other combination indicates a possible fault.
- If a fault occurs, please refer to the Sunpro 305 *Owner's Manual*.

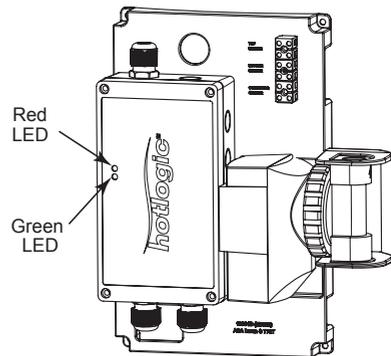



Lighting the Water Heater


Step 28

The water heater must be filled with water before lighting. Instructions for lighting procedure are on the inside of the access cover and shown below:

1. Rotate Gas control knob to OFF. Wait five minutes for unburnt gas to vent.
Note: L.P. Gas being heavier than air, will not vent upwards naturally.
2. Rotate gas control knob to “PILOT”. Press and hold down.
3. Press ignitor button until pilot lights.
4. After 30 seconds release gas control knob. If pilot goes out, repeat steps 2 & 3.

 **Warning: Wait five minutes before repeating ignition process.**

5. When pilot stays alight, rotate gas control knob to “ON”.

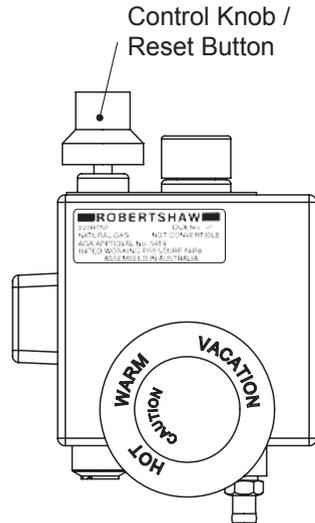



Commissioning Checklist

Tick	Task	See Step No.
<input type="checkbox"/>	Installer's Guide read	1
<input type="checkbox"/>	Safety audit conducted	2
<input type="checkbox"/>	Existing tank removed	3
<input type="checkbox"/>	Tank positioned on a level fireproof base in accordance with all plumbing and building regulations	4
<input type="checkbox"/>	Cold and hot water pipes connected	5 – 6
<input type="checkbox"/>	Collectors aligned and attached to roof	7 – 11
<input type="checkbox"/>	Fittings attached to collectors	12 – 16
<input type="checkbox"/>	4 Way Union Assembly fitted	17
<input type="checkbox"/>	Anti Frost Valve fitted	18
<input type="checkbox"/>	Roof penetration sealed with a flexible waterproof flashing	19
<input type="checkbox"/>	Temperature sensor installed	20 – 21
<input type="checkbox"/>	Heat Trap/Non Return Valve fitted	22
<input type="checkbox"/>	PTR valve fitted	23
<input type="checkbox"/>	Gas connected	24
<input type="checkbox"/>	GPO installed	25
<input type="checkbox"/>	Tempering valve fitted	26
<input type="checkbox"/>	Commissioning the System	27
<input type="checkbox"/>	Lighting the Water Heater	28



Installation Declaration

Location of Installation:
.....
.....

Tank Serial Number:

Tank Model Number:

Date Installed:

Dux Hot Water terms and conditions of warranty will apply only if the below is signed by the installer. This notifies Dux Hot Water that all the requirements of proper installation have been carried out by the installer in accordance with the Dux Hot Water Installation Commissioning Checklist and all other requirements noted in the Dux Hot Water Owner's Manual supplied with the solar water heater.

Upon completion of installation, this document **must** be given to the home owner in its entirety. When required by Dux Hot Water the home owner will provide this document as evidence that the installation of the solar water heater was carried out in accordance with Dux Hot Water installation requirements.

Declaration

I have installed the Dux Hot Water solar water heater in accordance with the above instructions. If the instructions have not been followed then I understand that the Dux Hot Water terms and conditions of warranty will be void.

Name:

Signed:


Company:

Plumber's Licence Number:

Date:



Components

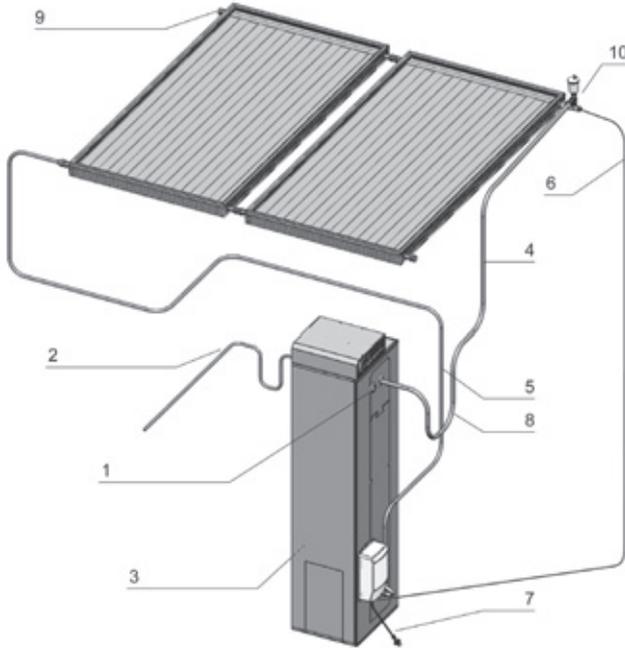


System Components

- | | |
|----|--|
| 1 | PTR valve |
| 2 | Hot water outlet to house |
| 3 | Cold water inlet (not visible) |
| 4 | Solar collector return |
| 5 | Cold water outlet to solar collector |
| 6 | Collector cable |
| 7 | Power supply cable |
| 8 | Heat trap (300mm recommended) |
| 9 | Anti-frost protection valve (optional) |
| 10 | Air bleed valve |



Components

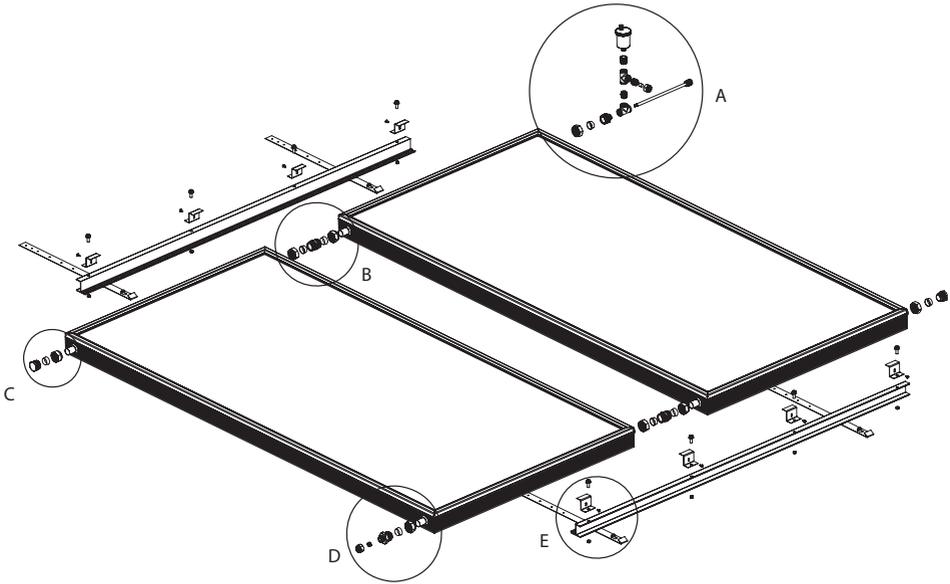


System Components	
1	Air bleed valve
2	Bush
3	15mm female tee
4	Union 15mm M × 15mm C
5	Sensor dry well
6	Hex nipple
7	Union 1" C × ½" M
8	Union conetite


System Components	
9	End Stop 1" conetite
10	Union 1" C × ½" C
11	24mm galvanised screw, self tapping
12	Bolt
13	Bracket - clamp
14	Solar heater rail
15	Nut – Nyloc St.
16	Collector strap




Components

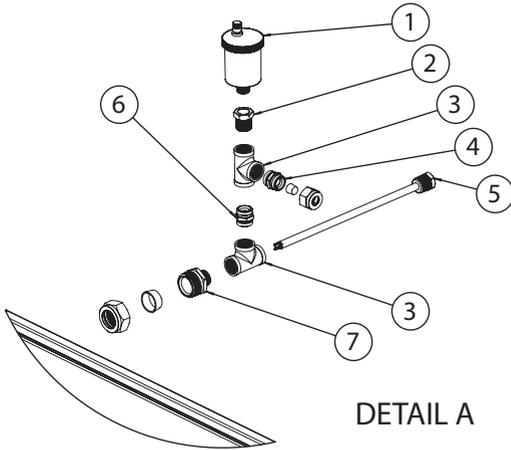


DETAIL A

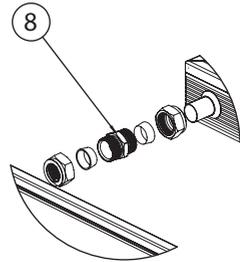


DETAIL B

 

DETAIL C
SCALE 1 : 10

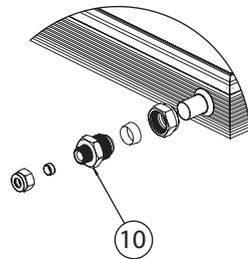

DETAIL D

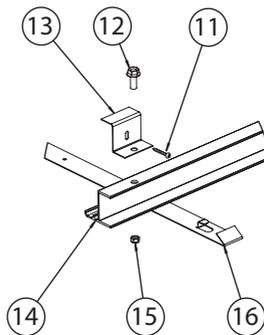

DETAIL E



Installer's Guide – Sunpro 305

Installer's Guide



Installer's Guide – Sunpro 305

***sunpro*[®] 305**

(Gas Pre-Boost) Solar Water Heater

Models: 170FNS

For Advice, Repairs And Service, Call:

1300 365 115 (Australia)

0800 729 389 (New Zealand)