

MODELS

YPRM66XB -Main Controller (standard)

YPRS66XB -Bathroom Controller (standard)

YPRM67XB -Main Controller (Premium)


YPRS67XB -Bathroom Controller (Premium)

YPRP62XB -Sub Controller

(To suit water heaters YS1750R, YS2150R & YS2550R)


Please note remote controls are **OPTIONAL**
and must be purchased in addition to the water heating appliance.

Remote Control Operation HANDBOOK

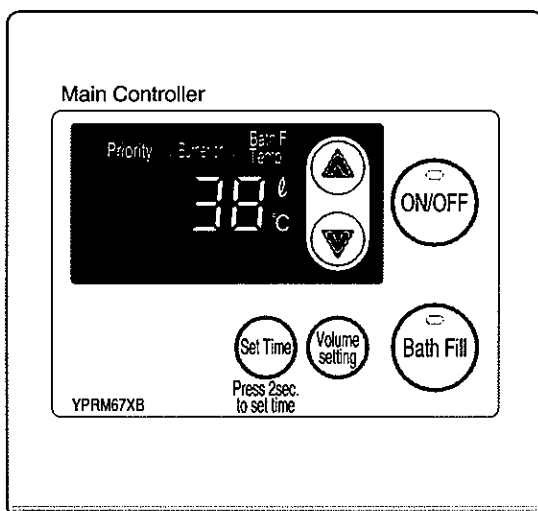


INDEX

	<i>Page Number</i>
Dimensions	3
YPRM67XB Main Temperature Selector Pad (Premium controller)	4
YPRM67XB Operation control buttons	5
YPRM67XB Turning ON	5
YPRM67XB Adjust temperature	5
YPRM67XB Set Bath Fill Volume	6
YPRM67XB Set Time of Day	6
YPRS67XB Bathroom Temperature Selector Pad (Premium controller)	7
YPRP62XB Sub Temperature Selector Pad	8
YPRM66XB Main Temperature Selector Pad (Standard controller)	9
YPRS66XB Bathroom Temperature Selector Pad (Standard controller)	10
Temperature Selector Pad Wiring	11
Warranty Details	12

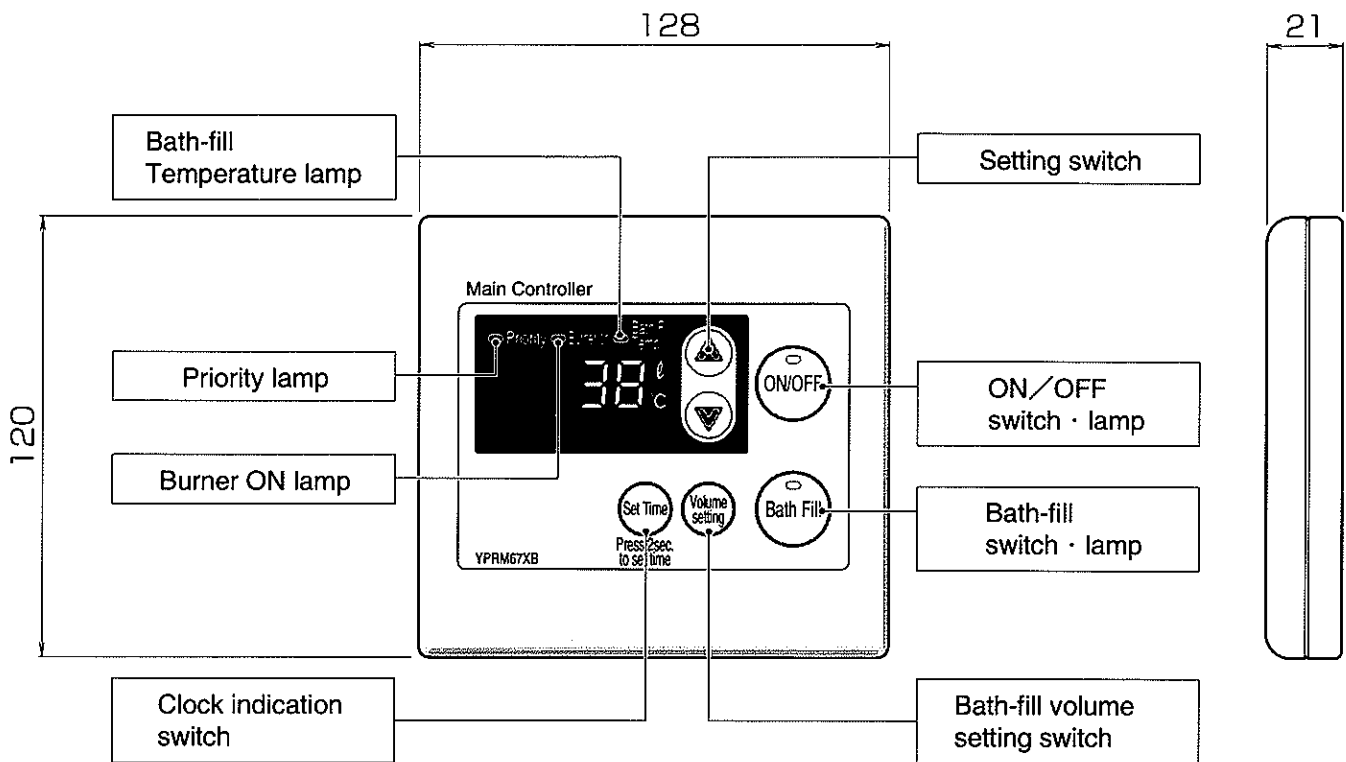DIMENSIONS

All remote controls have the same dimensions


YPRM67XB Main Remote Control (Premium controller)

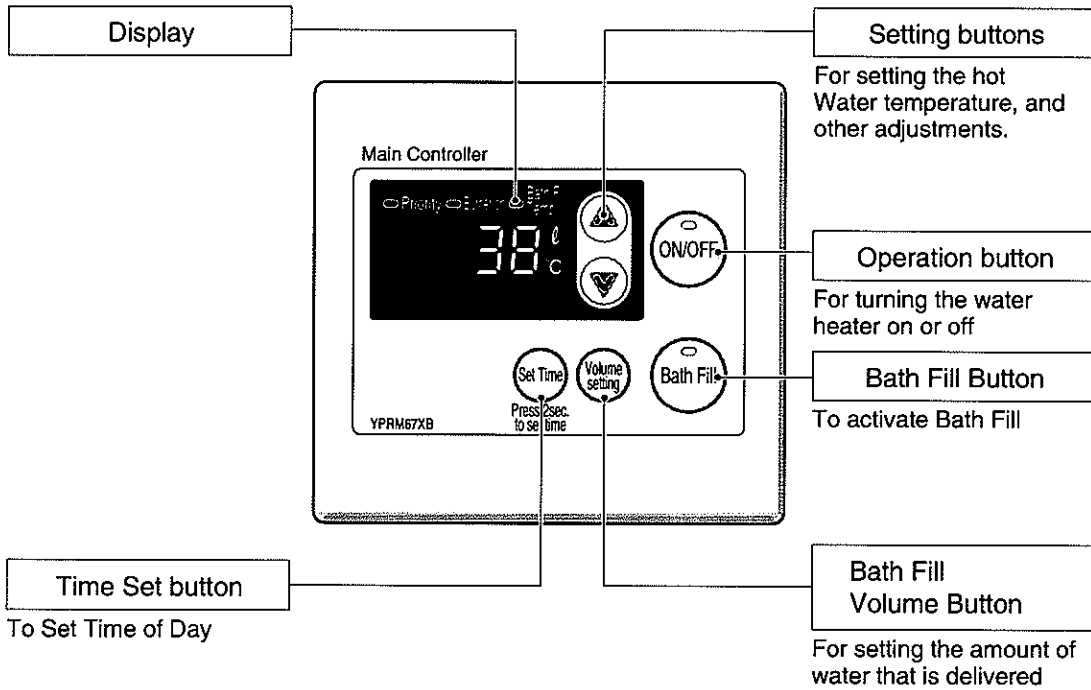

Please remove the protective sheet from the display panel, before use.


Operation

To obtain hot water the remote control **MUST** be turned ON
Press ON then adjust to desired water temperature

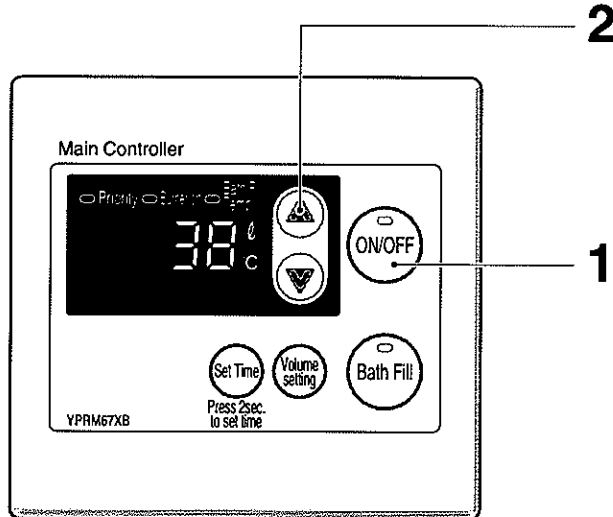


To adjust hot water

To increase the water temperature press the "UP" red arrow. To lower the water temperature press the "Down" blue arrow. When the hot tap is turned ON the "Burner on" light is illuminated.

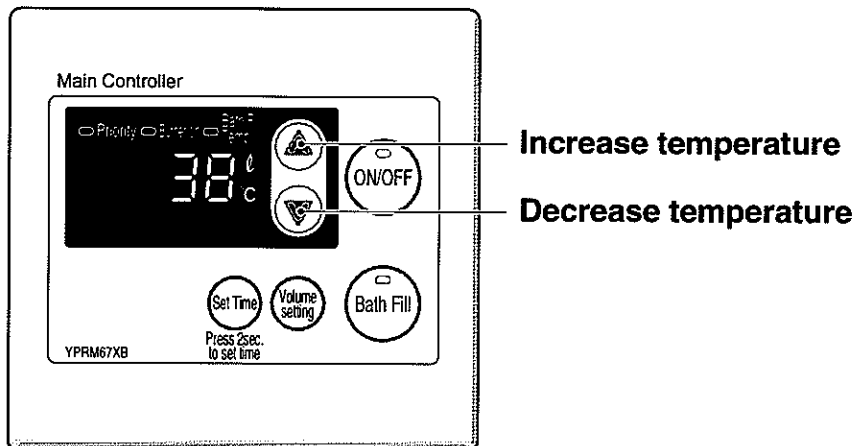


Set Bath Fill Volume

- 1 To set the "Bath Fill" turn ON the remote control.
- 2 Press the "Bath Fill", adjust the water temperature using the UP & Down arrows, maximum 48°C.
- 3 Press "Volume setting", adjust water volume using the UP & Down arrows.
- 4 Open hot water tap, water heater will automatically stop the water flow when the selected volume has been delivered. (Check carefully at the first use to ensure that the correct volume has been selected).
- 5 Close hot water tap.
- 6 When water heater has delivered the selected volume, press the OFF/ON button to cancel the Bath Fill

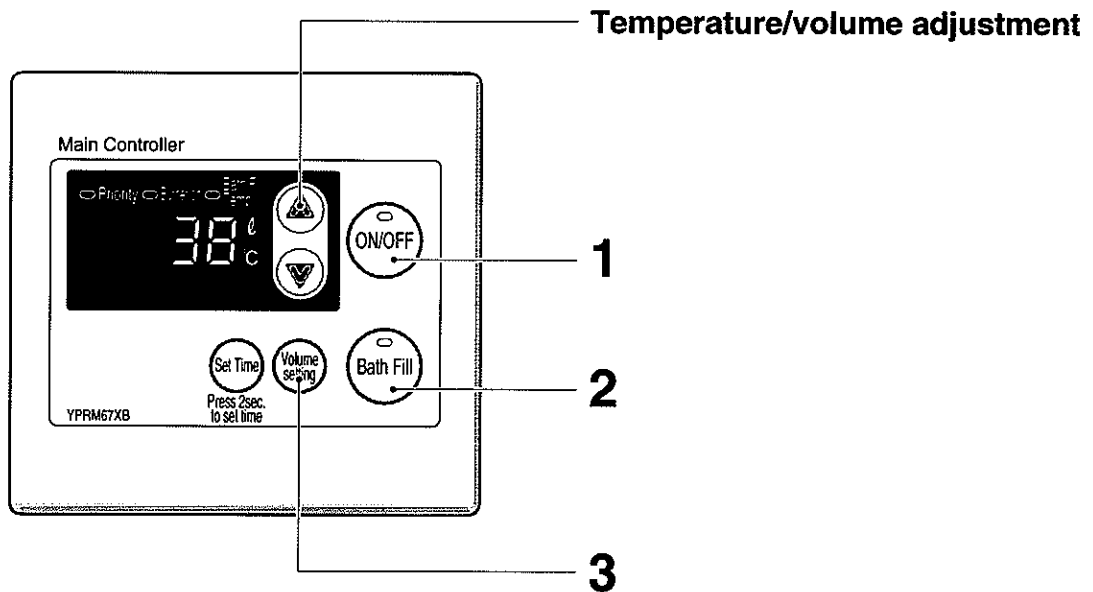


Set Time of day

To set the time of day press and hold the "Set time" button. After 2~3 seconds the display will show hh:mm (hours:minutes). Advance the time using the red arrow or down using the blue arrow.

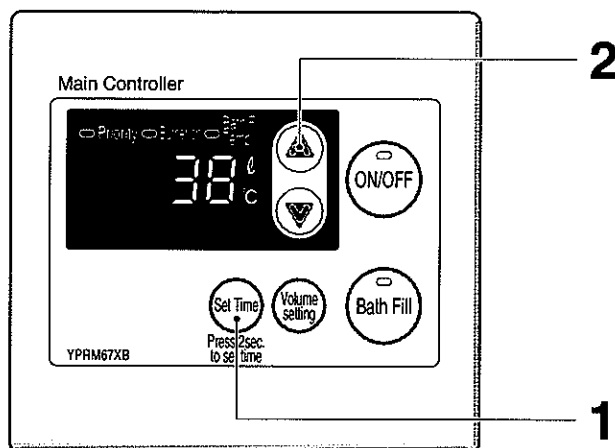


YPRS67XB Bathroom Remote Control (Premium controller)

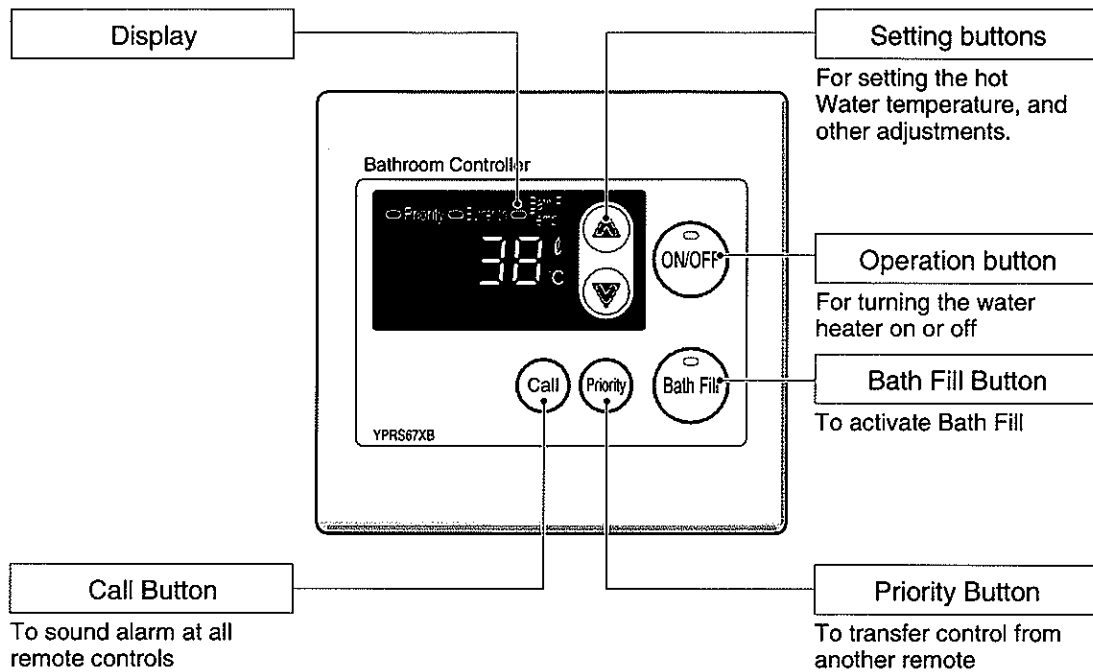


The operation of the controls is identical to the main control. When any control has "Priority" only that remote can alter the temperature. If the bathroom remote control has priority left ON, press OFF & ON on the Main control to transfer priority to the Main controller (Except if water is running)

YPRP62XB Ensuite Remote Control

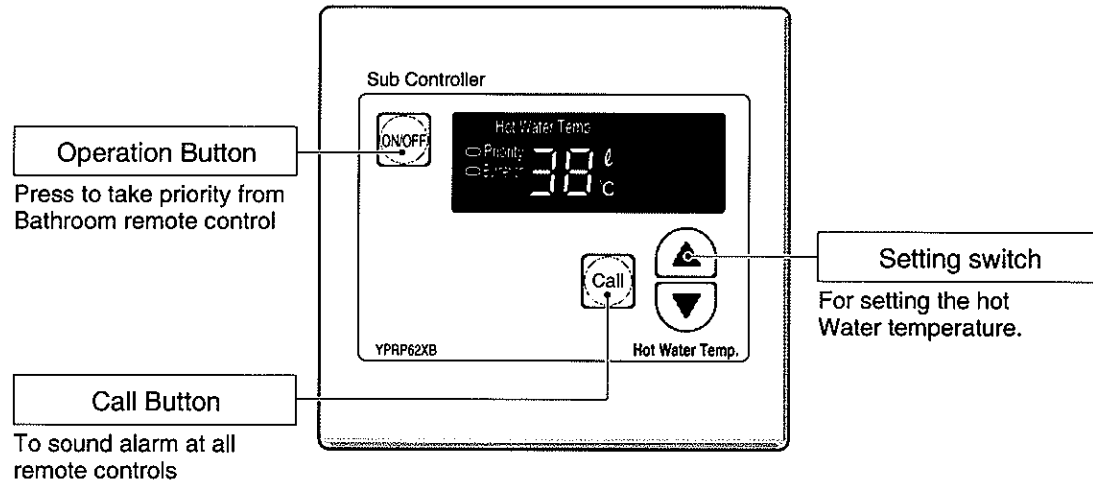


YPRM66XB Main Remote Control (Standard controller)

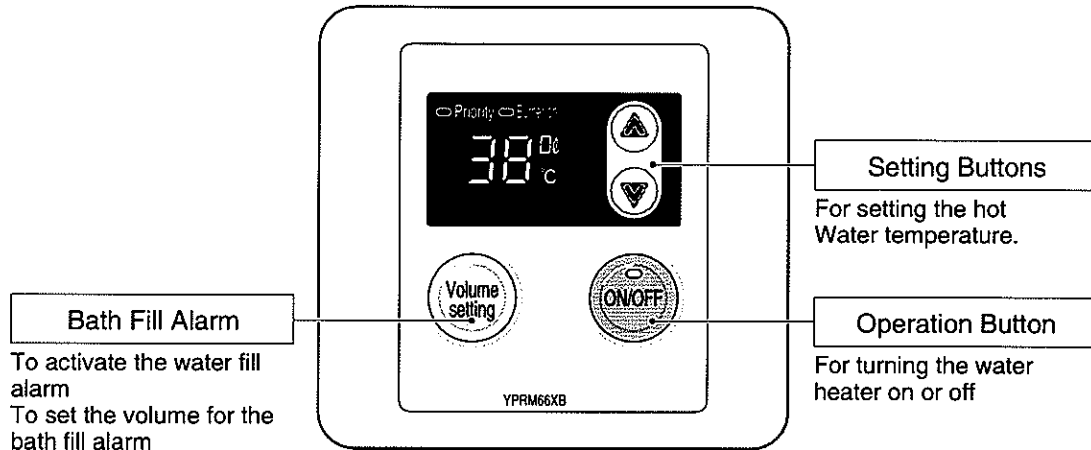

Set Bath Alarm Volume

- 1 To set the "Volume" turn ON the remote control.
- 2 Press the "Volume" button, the display will flash the volume of water X 10. Example Display 18 =180 litres
- 3 While the display is flashing adjust the water volume using the UP & Down arrows.
- 4 Open hot water tap, water heater will sound an alarm when the selected volume has been delivered. Return to bath room and close water flow.
- 5 Press "Volume" button to switch the ALARM ON or OFF

YPRS66XB Bathroom Remote Control (Standard controller)

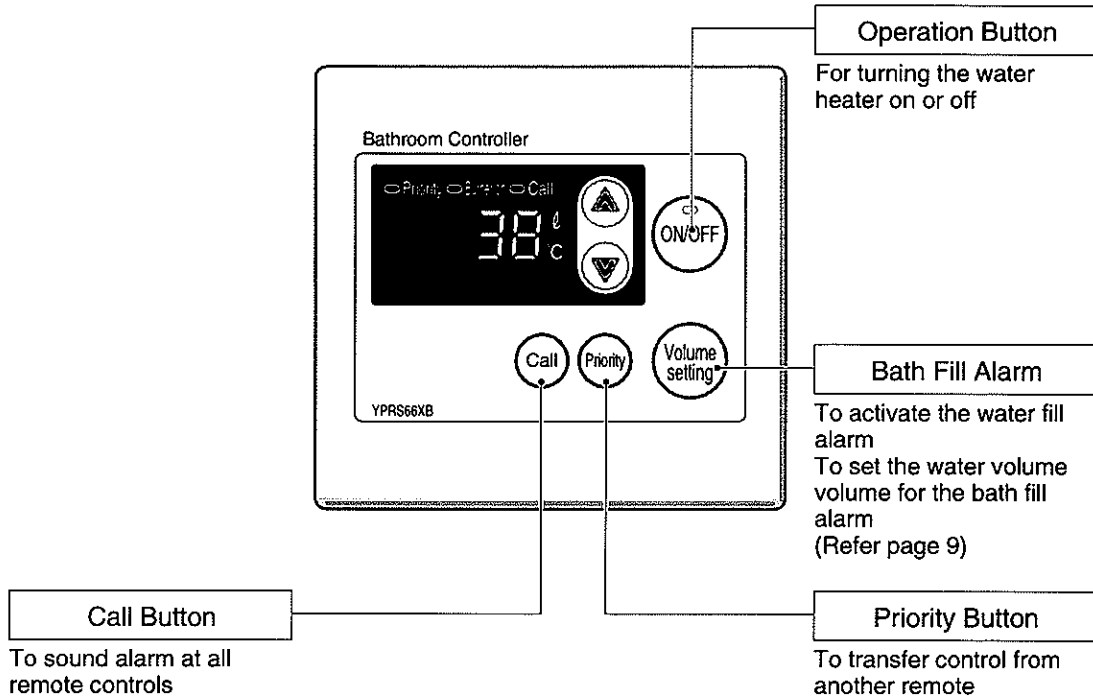


The following combination of remote controls will operate the water heater.

Only Main Controller	Works
Only Bathroom Controller	Works
Only Sub Controller	Won't work
Main & Bathroom Controller	Works
Main, Bathroom & Sub Controller	Works
Main & Sub Controller	Won't Work
Bathroom & Sub Controller	Works

Remote control wiring

Parallel Connection

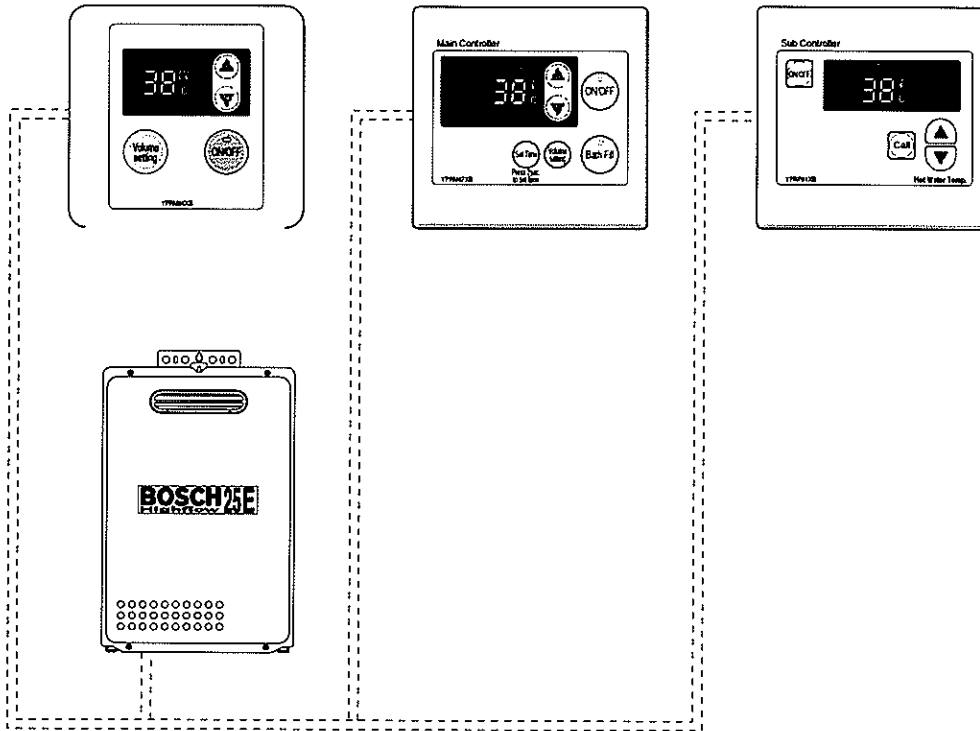

Only connect one of each type controller to the water heater. Do not mix YPRM(S)67 & YPRM(S)66 YPRP62 can be used with either type remote control. Refer details Page 10.

Warranty Details For Remote Controls

Your Remote Control Unit is guaranteed as follows:

For appliances used in domestic applications, ie. normal hot water drawn from household outlets, the warranty period is three (3) years parts and labour. The heat exchanger is covered for a period of ten (10) years (part only, for the original supplied with the appliance, not warranty replacements). Purchased spare parts are guaranteed for 12 months, replacement only.

For appliances used in commercial applications, the warranty period is twelve (12) months parts and labour including the heat exchanger.

The warranty period commences from the purchase date. Claims for warranty will only be accepted upon suitable proof of purchase submitted to Robert Bosch (Australia) Pty. Ltd. or an approved Bosch Service Agent authorized to carry out warranty repairs.

PURCHASER'S STATUTORY RIGHTS

The warranty terms set out below do not exclude any conditions or warranties which may be mandatorily implied by law, and your attention is drawn to the provisions of the Trade Practices Act, 1974, and State legislation which confers certain rights upon consumers. The ROBERT BOSCH (AUSTRALIA) PTY. LTD. Warranty supplements these.

EXTRACT OF TERMS OF DELIVERY AND SALE:

Warranty of products marketed by Robert Bosch (Australia) Pty. Ltd. herein referred to as RBAU.

- a) RBAU warrants products marketed by it as free from faults and defects and having the specified qualities according to the respective state of technology. Notwithstanding that the products may have been sold by description or sample the products shall be accepted by the Buyer even though alterations in design or construction have been generally introduced between the date of contract and the delivery of the products.
- b) The warranty shall be limited to the replacement or repair at the option of RBAU of any defective products and of such parts of RBAU's products as have been damaged in consequence of the defect despite proper treatment. Parts replaced will not be returned.
- c)
 - i) Repairs and maintenance shall not extend the warranty period of the appliance.
 - ii) If the product is located outside of the service agent's area, the consumer shall be responsible for the service agent's travelling costs, and if necessary the expenses of freight, packing and charges of a similar nature.

Without limiting the generality of these terms of delivery this warranty shall not apply to products sold in the following cases :---

- i) if the products sold are repaired or altered by any third party without RBAU's consent.
- ii) where parts not manufactured or sold by RBAU are used in and replacement or repair.
- iii) if products are not used with proper care and for the purpose for which they are sold and in accordance with any specified instruction for use.
- iv) if changes occur in the condition or operational qualities of the products due to incorrect storage or mounting or due to climatic or other influences.
- v) in respect of faulty construction or defects due to the use of unsuitable materials if such method of construction or use of material has been specified by the Buyer.
- vi) in respect of surface coating and glass damage.
- vii) in respect of the replacement of parts when such replacements are part of the normal maintenance, service or normal wear and tear.

No servant or authorised service agent has authority to add to or alter the terms of this warranty.

PLEASE NOTE:- If a service call is requested and it is found that it is not a manufacturing fault, you may be charged for the call even during the warranty period.

ROBERT BOSCH (AUSTRALIA) PTY. LTD. (Incorporated in Victoria) Phone 1300 30 70 37

Vic. Cnr. Centre Road & McNaughton Roads, Clayton, Vic. 3168. Ph: 03 9541 5555

N.Z. 14 - 16 Constellation Drive, Mairangi Bay, Auckland. N.Z. Ph: 09 478 6158

Visit us at WWW.bosch.com.au