

**ENERGYSAVER RHFE-557FTR**


<b>No.</b>	<b>Part Name</b>	<b>RA Part No.</b>	<b>11 Digit Code</b>
1	REAR PANEL A ASSEMBLY	90101825	004-595-000
2	TOP PLATE REINFORCE		044-028-000
3	FILTER SUPPORT SIDE	90102161	538-059-000
4	FILTER BKT BOTTOM 308/557	90102179	538-064-000
5	REAR PANEL INSULATION		030-022000
6	FLOOR FIXING BRACKET		537-677-000
7	CONTROL PANEL ASSY 0C	90139148	001-603-000
7	PANEL TOP & PCB SV 557	90199150	001-0461000
8	LID CONTROL SV 557	90191917	035-1525000
8	CONTROL LID	90185422	035-0031000
9	PANEL FRONT 0 557FTR	90101544	019-853-000
9	PANEL FRONT SV 557	90194290	019-3757000
10	LOUVRE D		046-195-000
11	LOUVRE BOTTOM 0 557	90101874	095-140-000
11	LOUVRE BOTTOM SV 557	90190177	095-239-000
12	PANEL KICK 0C 557	90102047	098-469-000
12	PANEL KICK SV 557	90194272	098-216600
13	PANEL SIDE L0C 557	90101569	003-256-000
13	PANEL SIDE LH SV 557	90196775	003-925-L00
14	PANEL SIDE RH SV 557	90191620	003-925-R00
14	PANEL SIDE R0C 557	90101619	003-257-000
15	HUMIDIFIER TRAY	90112830	078-018-000
16	AIR FILTER ASSY 0C 557	90102054	017-289-000
17	FOOT FRONT 557 556 553	90165663	015-140-000
18	FOOT REAR 557 556 553	90165655	015-141-000
20	PANEL KICK LATCH 556 557	90175589	502-242-000
21	LATCH	90194218	512-419-000
22	CORD BUSH 151 212 417 506	90177106	194-098-000
23	POWER CORD FIXING BRKT	90177114	538-180-000
24	CABLE CLIP (0248)		504-024-000
25	THERMISTOR HOLDER ALL	90165267	537-179-000
25	THERMISTOR HOLDER USE	90167263	537-179-000
26	WIRE SADDLE 417 506 516	90176728	514-020-000
27	BUSH		194-112-000
28	BUSH		194-119-000
29	SPACER TOP 0C 557FTR	90101981	034-607-000
29	SPACER TOP SV 557	90191282	034-0042000
30	SPACER SIDE RH SV 557	90191285	034-004-300

30	SPACER SIDE R0C 557FTR	90101990	034-608-000
30	SPACER SIDE RH SV 557	90191285	034-0043000
31	SPACER SIDE LH SV 557	90191287	034-0044000
31	SPACER SIDE L0C 557FTR	90101999	034-609-000
31	SPACER SIDE LH SV 557	90191287	034-0044000
32	CLIP WALL SPACER	90147471	504-018-000
33	BACK COVER FIXING PLATE		537-678-000
34	UTYL-RUBBER VIBRATION ABS		540-084-000
100	HEAT EXCHANGE ASSY RHF557	90131731	108-141-000
101	OHS FIXING PLATE		537-422-000
102	FLAME ROD BRACKET		537-849-000
103	FLAME ROD GASKET B		580-458-000
104	FLAME ROD RHF557 556 1001	90142803	230-017-000
105	CHAMBER BRACKET		537-673-000
106	HEAT EXCHANGER BRACKET		537-735-000
107	SEAL PLATE ASSEMBLY		526-113-000
108	FRANGE		190-149-000
109	BURNER BOX		527-217-000
110	BURNER ASSY NG/LPG	90170630	157-063-LPG
111	BURNER SUPPORT REAR ASSEM		538-276-000
112	BURNER BOX GASKET RHF556	90175662	580-641-000
115	FIXING BRKT GASK	90175670	580-334-000
116	ELECTRODE RETAINER		506-145-000
117	ELECTRODE RHF556 557	90175696	202-132-000
118	ELECTRODE GASKET RHF553	90173105	580-176-000
119	INJ MANIFOLD 431 556	90178542	101-355-000
121	MANIFOLD GASKET B		580-392-000
122	WARM AIR SEAL PLATE		526-149-000
123	BURNER BOX FIXING PLATE		537-674-000
124	HEAT EX GASKET RHF556	90175563	580-640-000
125	GAS CONTROL NG/LPG	90175704	114-409-000
126	PRESSURE POINT SCREW	90195157	501-275-005
127	O-RING (S-4)	90195165	520-300-010
128	CONNECTING TUBE ASSEMBLY		102-936-000
129	INLET TUBE O RING	90165523	520-024-010
130	PRESSURE POINT		135-014-000
131	O RING (S14) 506 516 318	90176611	520-325-000
132	GASKET 417	90176637	510-519-000
134	GAS INLET FLANGE 553 556	90165515	106-301-000
135	MOD VALVE MANIFOLD	90165549	106-504-000


136	MAGNET VALVE ASSEMBLY		114-358-000
137	COMBUSTION FAN ASSY	90142670	040-229-000
138	COMBUSTION FAN CASING ASS		019-0806000
139	CUSHION RUBBER RCE 560PTR	90183195	540-051-000
140	S SCREW (MOTOR)		501-303-000
141	COMB CHAMBER CONN TUBE	90131764	322-147-000
142	CONNECTING TUBE GASKET		580-457-000
143	COMB CHAMBER CONN ELBOW	90133968	322-148-000
144	CONNECTING TUBE RETAINER		538-062-000
145	HOUSING RHF556 557 553	90123043	094-010-000
146	INLET SEAL HOUSING RHF557	90123050	510-506-000
147	INLET HOSE RHF556 557 551	90122961	513-126-000
148	RUBBER INLET ELBOW RHF557	90122953	191-051-000
149	FLUE EXHAUST ELBOW ASSY	90122950	191-206-000
150	O RING 35.5MM FLUE ELBOW	90122946	520-160-000
151	O RING 34MM FLUE EXTENS	90122920	520-142-005
152	INSULATION CLIP RHF557	90165374	552-075-000
153	FLUE OUT COVER RHF556	90165382	034-457-000
154	FLUE EXH SLIDE TUBE	90122958	554-162-000
155	HOSE CLIP RHF556	90178146	538-065-000
160	FLAME ROD BRACKET		538-277-000
160	LONG WALL TOP (B FIUE)		055-626-000
160	STANDARD WALL TOP		055-553-000
191	FLUE LOCK STOPPER	90165366	512-326-000
192	SNAP STOPPER	90165358	512-327-000
400	CONVECTION FAN CASING ASS		019-0900000
401	CONVECTION FAN BLADE	90185968	040-185-000
402	MOTOR BRACKET A		537-850-000
403	CONVECTION FAN RHF557	90143116	222-343-000
405	INSULATING PLATE ASSEMBLY		030-843-000
406	TF FIXING PLATE		537-851-000
407	OVERHEAT SWITCH NO.2 FIXI		537-853-000
409	UNIT BRACKET A		538-278-000
410	TRANSFORMER FIXING PLATE		537-852-000
700	PCB MAIN 557	90125337	200-717-000
702	TRANSFORMER MAIN RHF557	90138546	224-265-000
703	SPARKER UNIT RHF556 557	90175829	262-028-000
704	HIGH TENTION CORD		203-219-000
705	ELECTRODE SLEEVE		513-109-000
706	OHS 90C RHF431 556 557	90178575	234-506-000

707	OHS 130C RHF431 556	90178567	234-505-000
708	O/HEAT THERMISTOR 308FTR	90177502	233-119-000
709	MAIN HARNESS ASSEMBLY		290-077-000
710	TF HARNESS		290-871-000
711	SV HARNESS		290-075-000
712	POWER CODE ASSEMBLY		206-177-000
715	FR リード線		209-340-000
716	MOTOR HARNESS A		290-069-000
717	CORD GASKET B		580-149-000
804	WARNING LABEL ELECTRIC	90176017	602-236-000
806	WARNING LABEL	90173121	602-707-000
807	SAVE-ENERGY LABEL		602-717-000
808	WATER LEVEL LABEL B		602-654-000
810	PACKING ASSY FOR OUTDOOR		510-0003000
811	REMOTE CONTROL UNIT	90175555	123-065-000


< RHFE-557FTR >

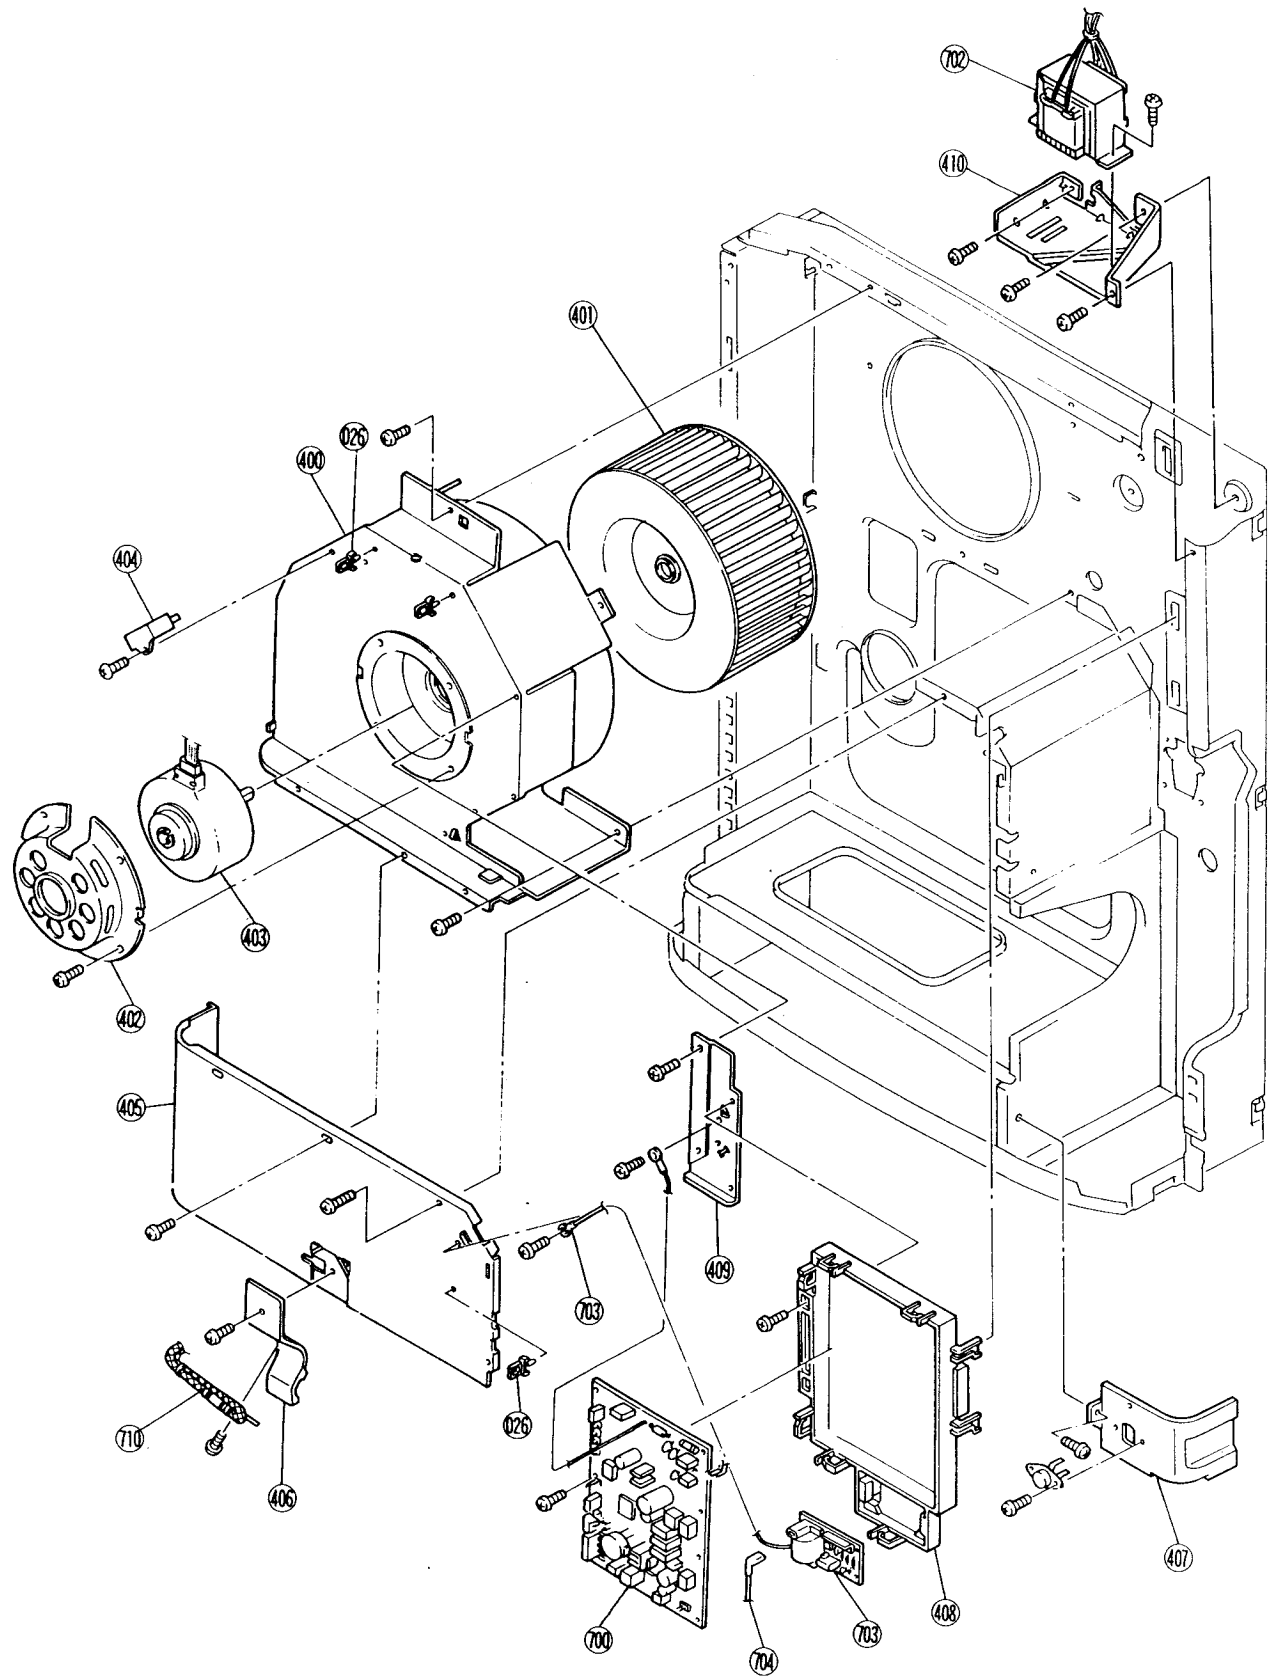


< RHFE-557FTR >

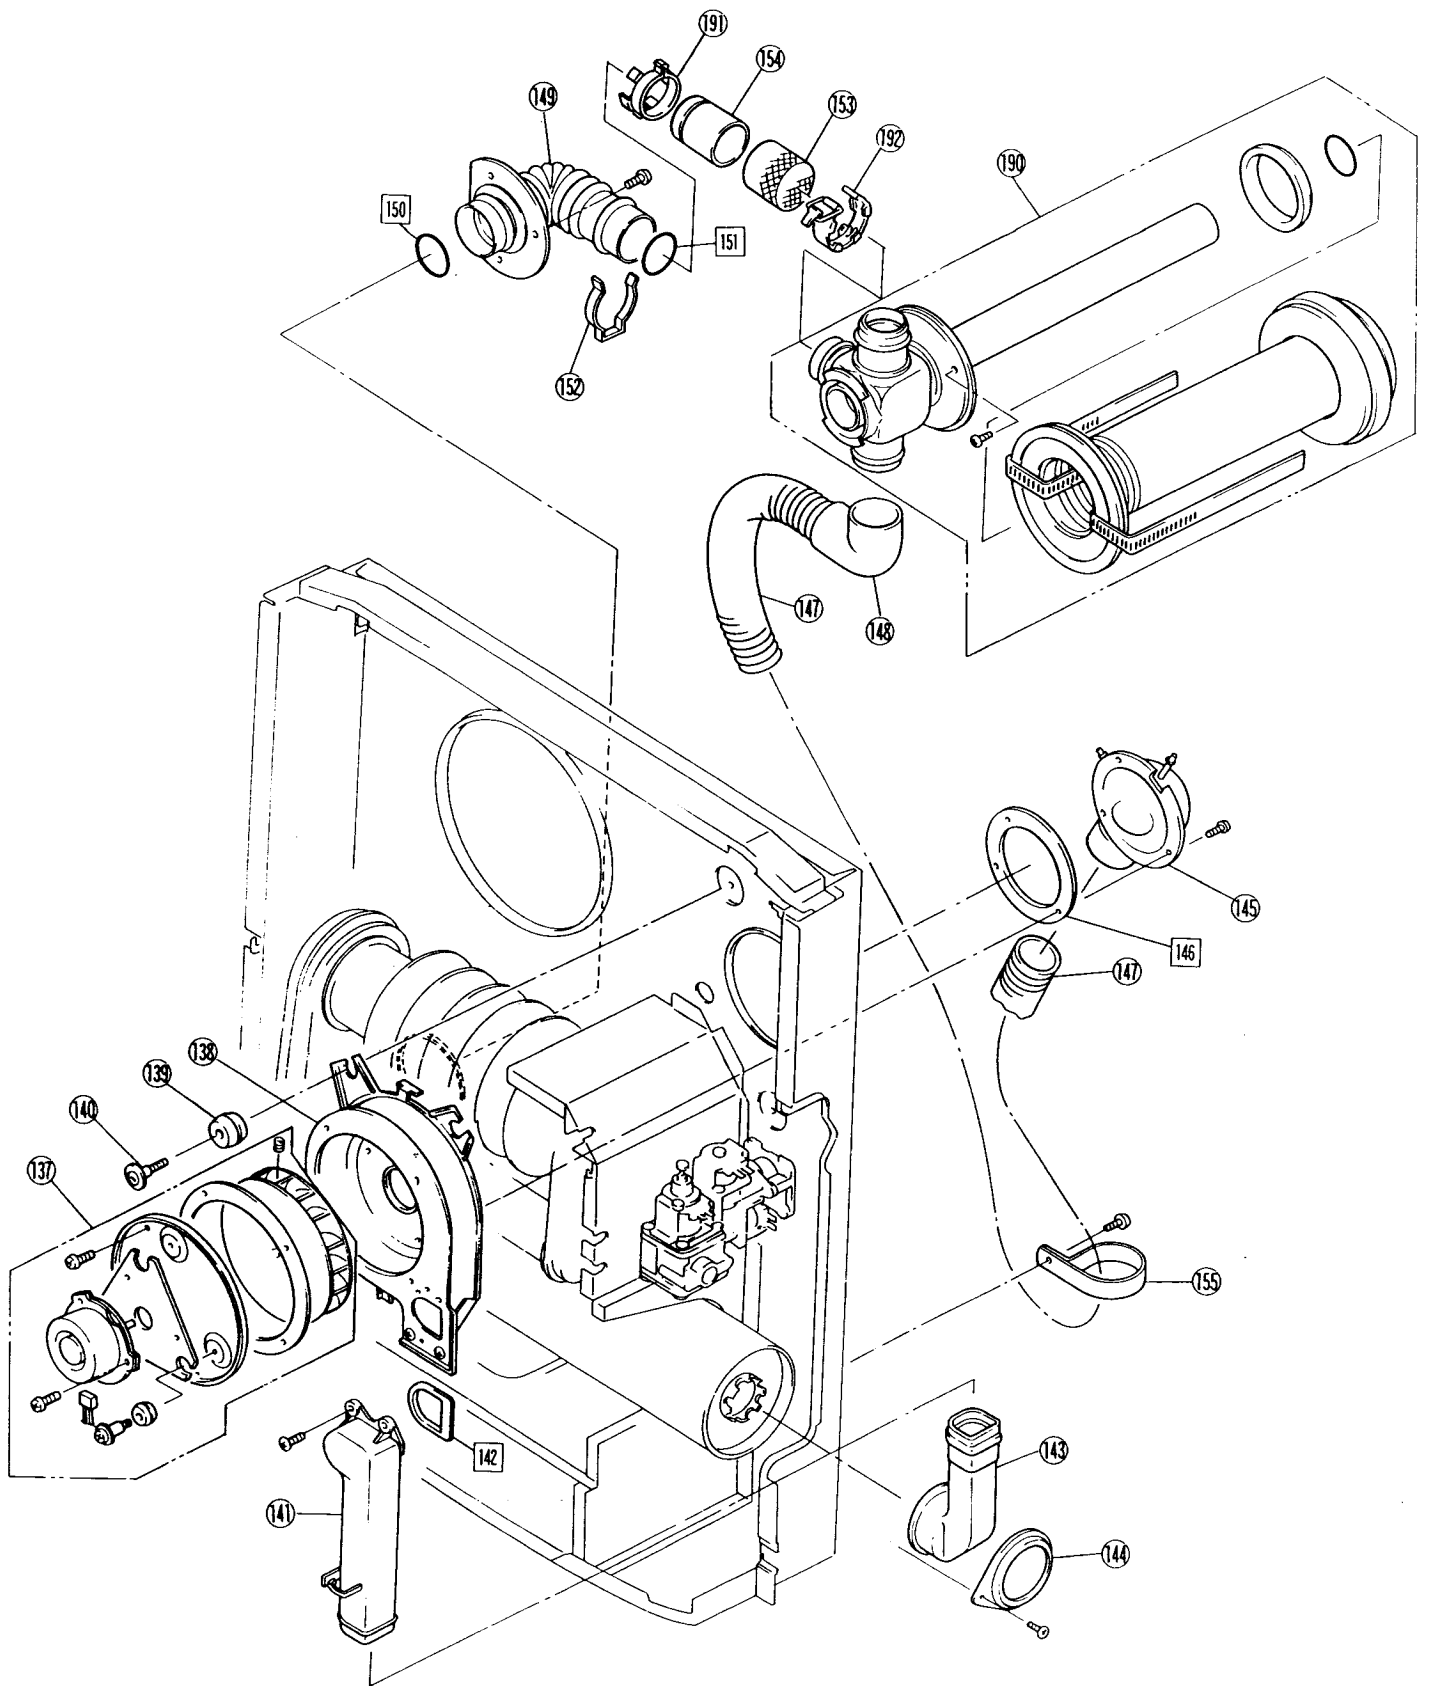

<RHFE-557FTR>

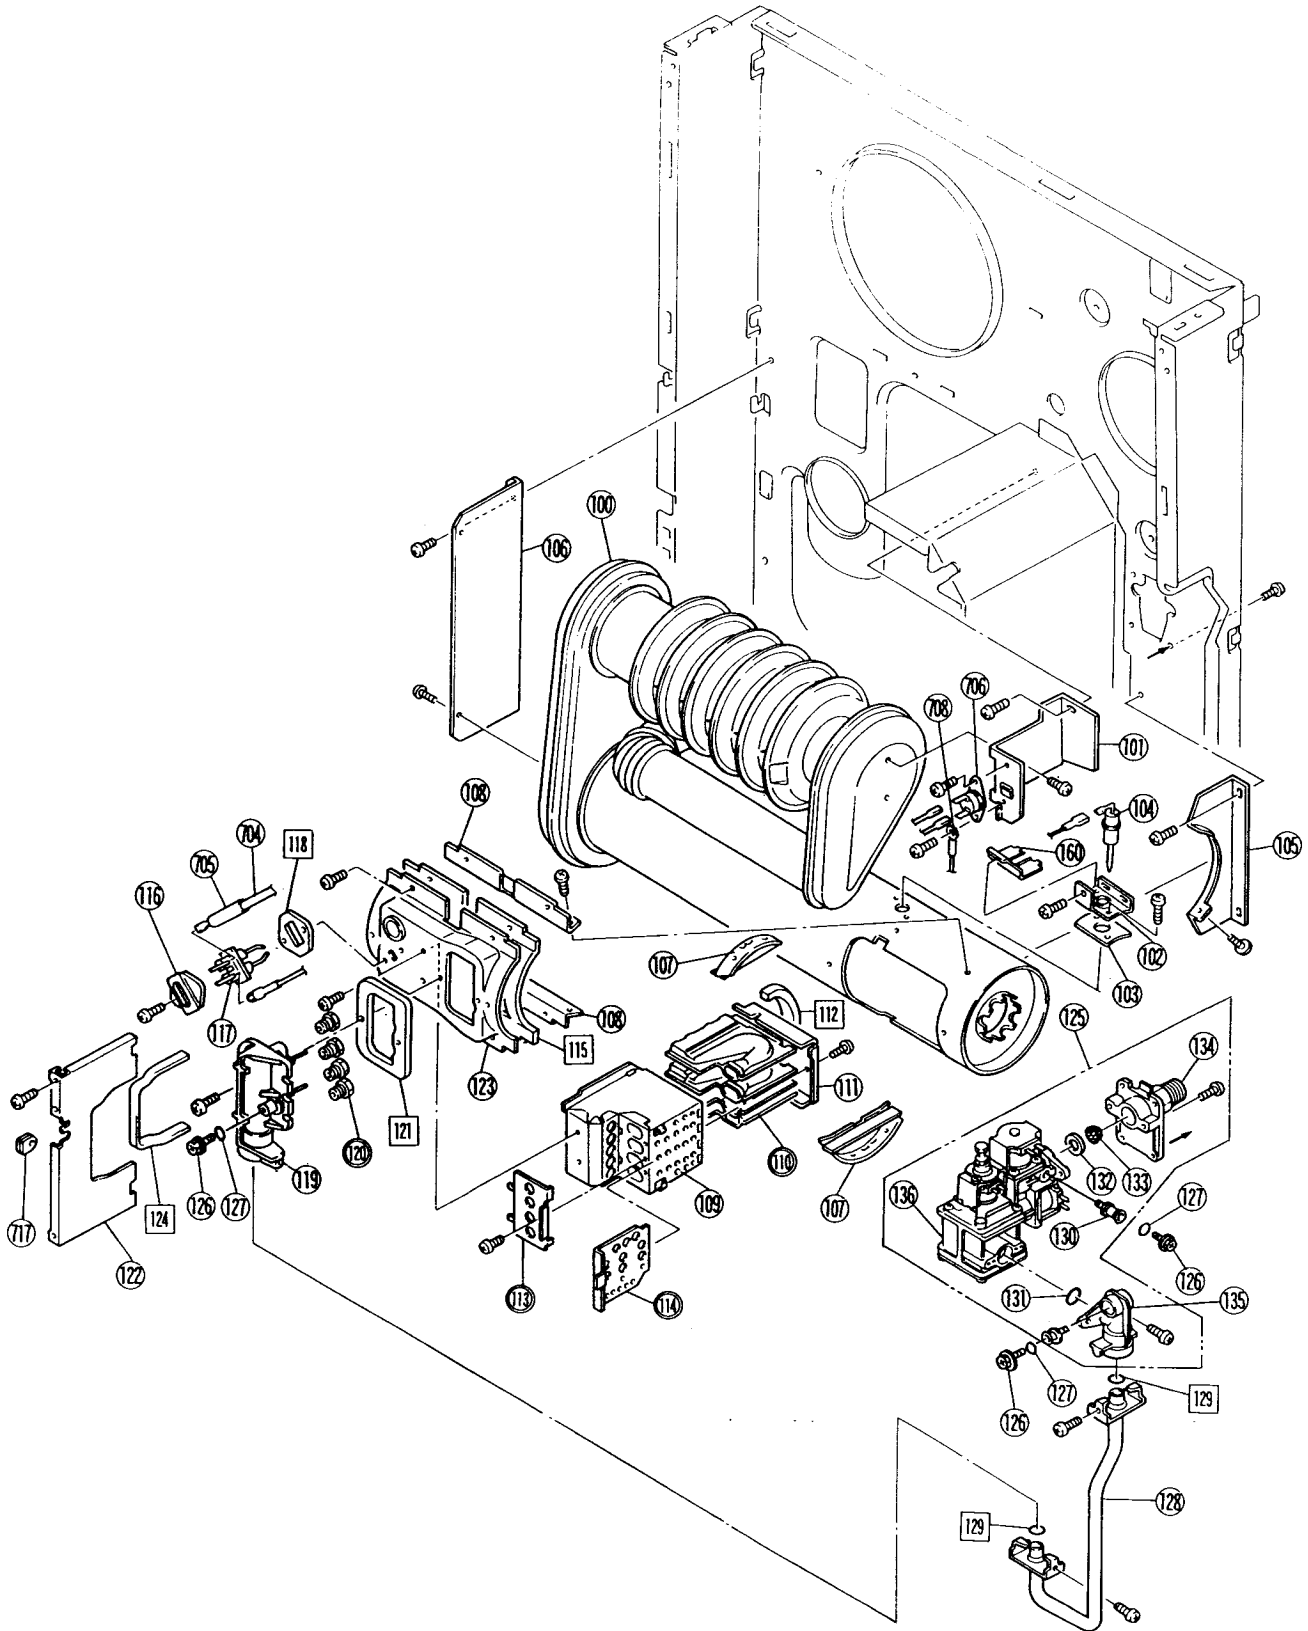

<RHFE-557FTR>

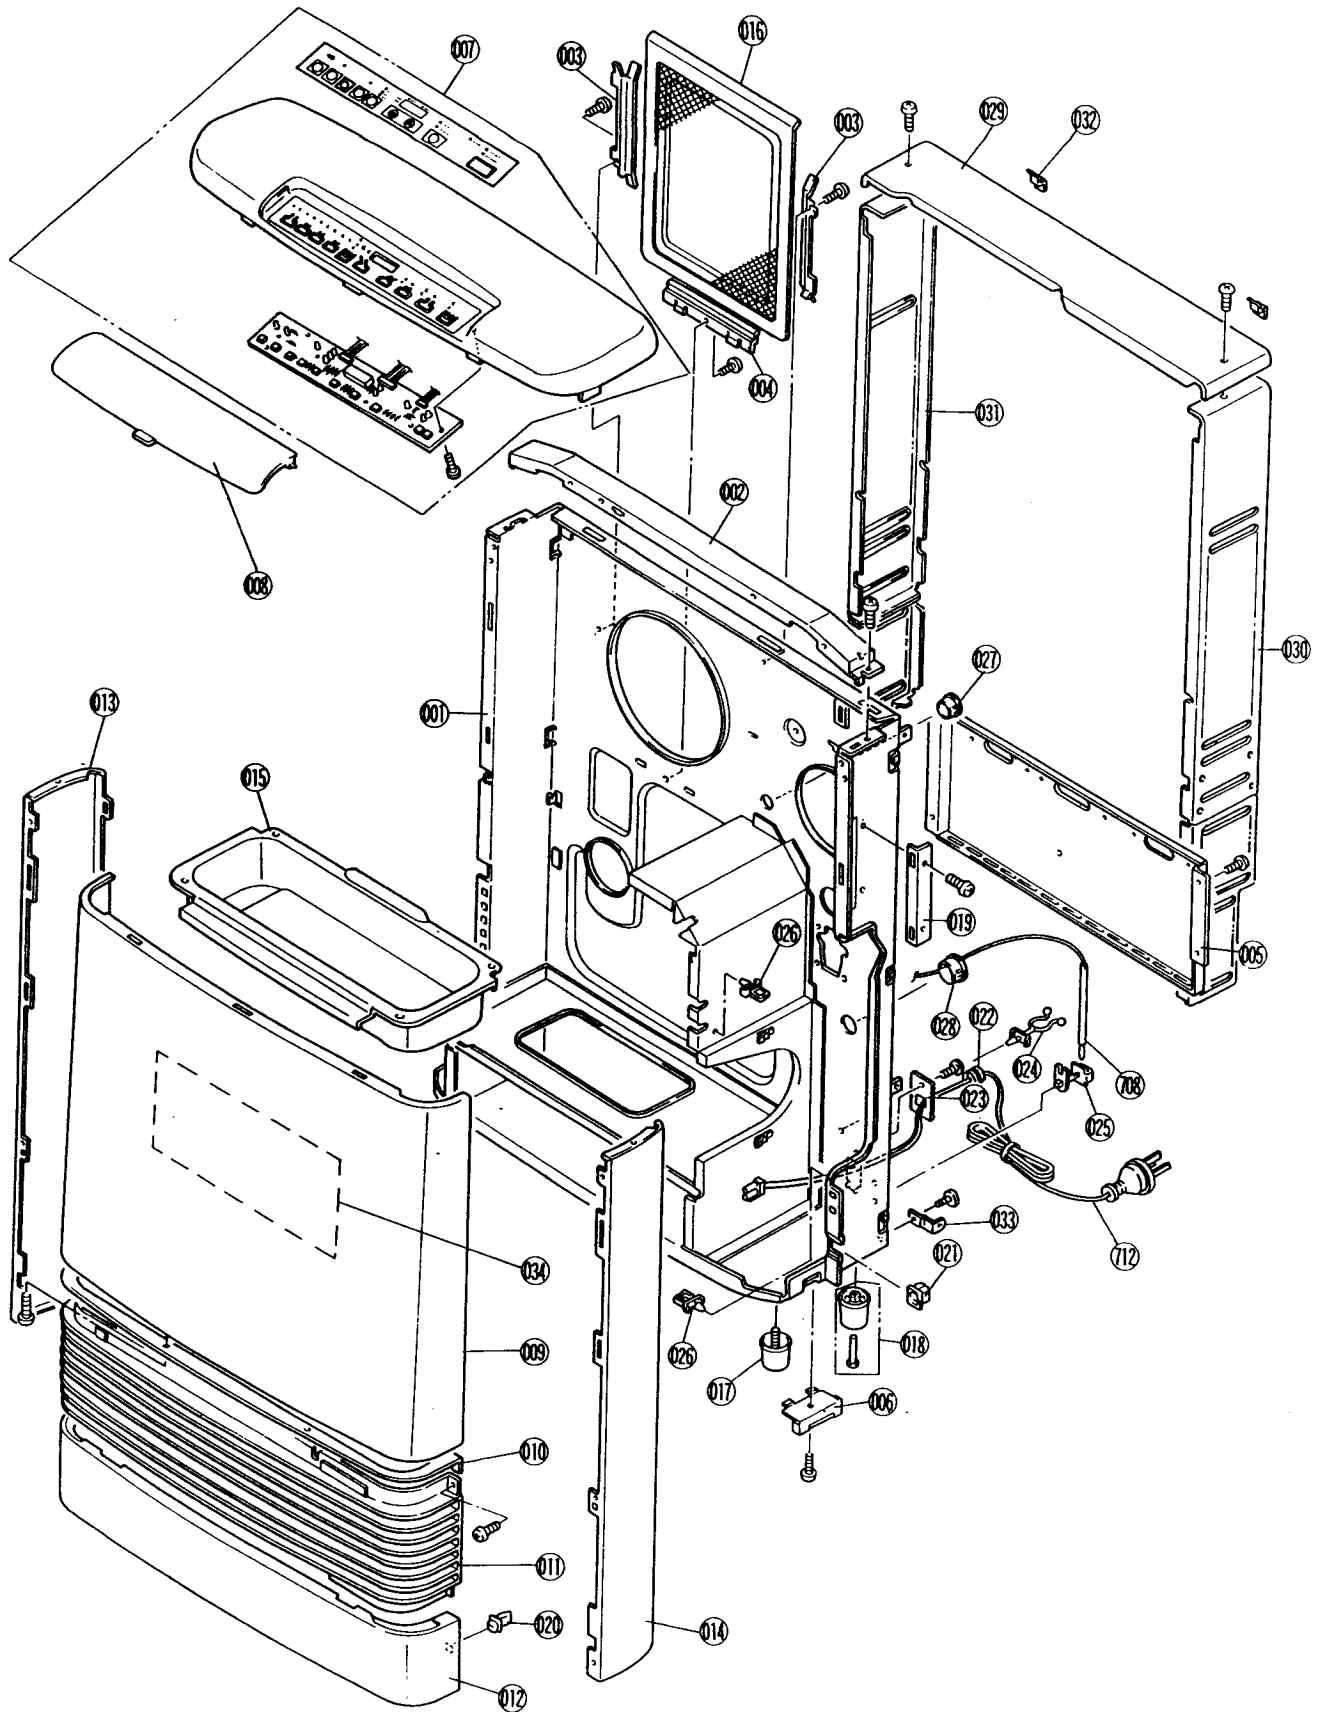



< RHFE-557FTR >

