



# Where to Find the Gas Isolation Valve

## GAS STORAGE AND CONTINUOUS FLOW

The isolation valve in the gas line allows the flow of gas to your water heater. If there is cold water running from the hot tap, check that the gas isolation valve is open.

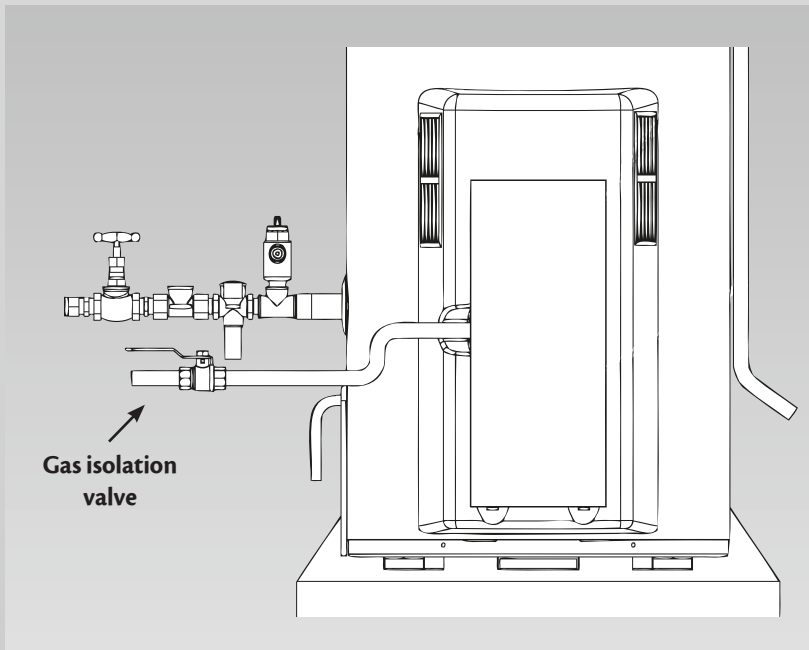

**Gas Storage Water Heater**

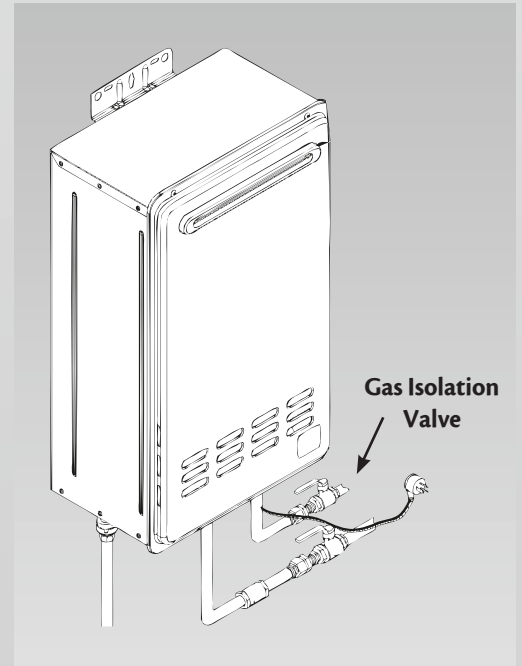

**Continuous Flow  
Water Heater**